

Operating Instructions Electronic Timer



1. Function and Operation

The clock is set by means of an pot which is in the holder of the timer underneath the cover.

The timer is started by pressing the button. Once the timer has been switched on, it can be turned off by pressing the button once again or by means of the internal time control. The timer is a useful contribution to safety and energy-saving everywhere where consumers forget to turn off lights.

They are suitable for attachment to electric light bulbs, 230V halogen lamps, low voltage halogen lamps with magnetic as well as electronic transformers connected in series (relay output).


It is also possible to connect to other loads.

Push-button switches, two-way switches and/or cross mountings can be replaced by both time switches when combined with push-button switch extensions.

Conventional mechanical push-button switches can also be used as an extension.

2. Installation and connection

1. Cut off main voltage.
2. Connect as showed on the figures.
3. Fix the appliance in the UP socket with mounting claws or screws.
4. Mount the central plate of the touch appliance.
5. Switch on the electricity.

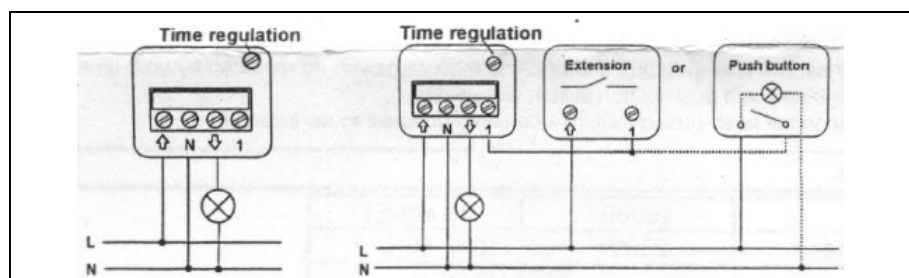

3. In case of failure

If the switch no longer works, please check the connected load or the built-in fuse.
If necessary, replace fuse only with a fuse of the same type and with the same fuse rating!



4. Safety information

Works on a 230V net can only be carried out by authorised persons. Please be aware that the mains voltage is cut off.

The consideration of this instructions leaflet is apart of our warranty conditions.

5. Technical data

	..1060ET..	..10.480ET
Nominale Voltage	230 V~ +6 % -10 % 50 Hz	
Capacity	1500 VA	
Fuse	T 6,3 / 250 V	
Time	1 – 60 minutes	1 – 8 hours

The N-conductor is required to operate the appliances !

6. Guarantee

Our products are under guarantee within the scope of the statutory provisions.

Please return the unit postage paid to our central service department giving a brief description of the fault:

ALBRECHT JUNG GMBH & CO. KG

Service-Center
Kupferstr. 17-19
D-44532 Lünen

Service-Line: +(49) 23 55 . 80 65 51

Telefax: +(49) 23 55 . 80 61 65

E-Mail: mail.vka@jung.de

General equipment

Service-Line: +(49) 23 55 . 80 65 55

Telefax: +(49) 23 55 . 80 62 55


E-Mail: mail.vkm@jung.de

KNX equipment

Service-Line: +(49) 23 55 . 80 65 56

Telefax: +(49) 23 55 . 80 62 55

E-Mail: mail.vkm@jung.de

 The CE-Sign is a free trade sign addressed exclusively to the authorities and does not include any warranty of any properties.