

Sunlight / wind sensor

for connection to awning control "AeroTec 04", ref.-no.: AT 04 WW

The wind sensor should be fitted to the roof or house wall. It must be installed at a position suitable for wind intensity measurements. Do not install at the side sheltered from the wind.

Ensure that no shadows (e.g. from a mast, tower, etc.) and no light reflections fall on the brightness sensor.

Technical data

Protection level: IP 43

Manufacturer: JUNG

Ref.-no.: AR 04